


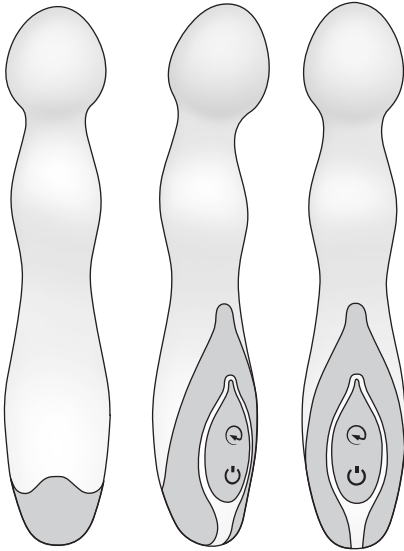

## VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



This device comes partially charged upon arrival. There is no need to fully charge it before use.

To charge, connect your toy to a computer or wall USB charger with the USB cable provided.

The LED indicator light flashes when toy is charging, and becomes solid when the charge is complete. Remove the toy from the charger once the light is solid to avoid any battery damage.

This device will take about 1 1/2 hours to charge completely, with less time for the initial charge.

When fully charged, toy will run for approximately 50 minutes.

Toy vibration will slowly decrease when charge gets low.

**USB RECHARGEABLE**

