

THE ENCHANTED BUNNY

BATTERY REPLACEMENT INSTRUCTIONS

Locate the battery compartment at the bottom of the toy, and pull off the cap by pushing gently on the door in a sliding motion to disengage the clasp. Remove the two AAA batteries from their compartments and discard. Place two new AA batteries in the compartments, using the + and - symbols as a guide to determine direction. Secure the cap by pressing it back on until the clasp locks.