



## VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



### CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, but it is recommended to fully charge before use. To charge unscrew chrome cap on bottom of handle to plug in charging cable.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 1 hour, and subsequent charges will take about 2.5 hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 40 minutes of play time on the lowest level of vibration, and about 30 minutes on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted.

This toy operates at a sound level of 50 db and a voltage of 3.7V with a battery power of 700Amh.

### INSTRUCTIONS FOR USE

This toy has a convenient one-button control that operates both the vibration functions and the warming function.

 
To turn toy on, press the button for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the button a single time for each new speed or function.

To engage the warming function, press the button twice quickly. The warming function can be engaged while any speed or function is in operation.

To turn toy off, press power button for at least 2 seconds.

### USB RECHARGEABLE



### WARNING:

#### CONTAINS STRONG MAGNETS

STRONG MAGNETS AND MAGNETIC FIELDS CAN CAUSE SERIOUS INJURY OR DEATH BY INTERFERING WITH MEDICAL DEVICES LIKE PACEMAKERS, OR CAN DAMAGE ELECTRONIC DEVICES AND MAGNETIC MEDIA.