

VIBRATOR CARE INSTRUCTIONS

- 1. Take care when using the vibrator for the first time. Vibration can be intense.
- 2. Clean your vibrator after every use.
- 3. Take care when cleaning your vibrator. Remember it is an electrical item.
- 4. Keep your vibrator clean and dry. Store in a non-damp environment.
- 5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
- 6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
- 7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
- 8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about 2.5 hours to complete, and subsequent charges will also take about 2.5 hours to complete.

2.3 nouse to complete.
The indicator light will be on while device is charging, and turn off when toy is fully charged.
There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 2 hours of play time using one function, and about 50 minutes using both

This toy operates at a sound level of less than 45db with a voltage of 3.7V. The battery operates at 800mAh.

INSTRUCTIONS FOR USE
This toy has an easy-to-use 2 button control panel. The shaft and clitoral piece motors are operated separately, each with their own button.
Press the top Power Button to turn the shaft motor on by pressing it for at least 3 seconds. The LED lights will turn on and the shaft will begin vibrating at its lowest vibration.
Press this same top Power Button more quickly to cycle through 9 different vibration speeds and functions in the shaft.
To turn off the shaft motor, press the Power Button for at least 3 seconds. Press the bottom Function Button for at least 3 seconds to turn on the rabbit ear clitoral piece. Press the same Function Button more quickly to cycle through 9 speeds and functions in the clitoral piece.

To turn off clitoral piece motor, press the Function Button for at least 3

USB RECHARGEABLE

