




## VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.

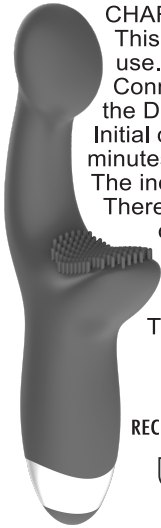

## CHARGING INSTRUCTIONS

This vibrator arrives with a minimal partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 20 minutes to complete, and subsequent charges will take about 90 minutes to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged.

There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 100 minutes of play time on the lowest level of vibration, and about 80 minutes on the highest level.

Toy vibration becomes weaker as charge begins to deplete.

This toy operates at a sound level of 55db with a 350mAh battery at a voltage of 3.7V.

USB  
RECHARGEABLE



## INSTRUCTIONS FOR USE

This toy has a convenient one-button control at its base.

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the button a single time for each new speed or function for a total of 10.