

<http://www.evolvednovelties.com/>

**EVOLVED**  
*Love is Back*



**Product Specifications:**

Material: Silicone and ABS  
Battery: 1 rechargeable Li-ion Battery in the love ball and 1 CR2032 button battery in the remote (not rechargeable).  
Voltage: 3.7V  
Number of Vibrations: 10 Patterns  
Number of Rotations: 3 speeds  
User time: 60 minutes  
Sound Level: <60 db

**CHARGING INSTRUCTIONS:** This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about 40 minutes, and subsequent charges will take about 60 minutes to complete. The indicator light will flash on toy while device is charging, and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 80 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level with average heating use. This toy operates at a sound level of less than 60db, at a voltage of 3.7V. The CR2032 battery in the remote is not rechargeable.

**INSTRUCTIONS FOR USE:** This toy can be operated directly with the button in the center of its base, or with the three buttons on its remote control. You can only use the vibrating & rotating functions separately with the remote. When using the toy buttons directly, the motor will cycle through the 3 rotating speeds at the same time as the 9 vibrating functions.

**OPERATION WITH REMOTE CONTROL:** Remove material protecting battery before use.

**Important note:** You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on. Once the toy is on, press the Power Button for at least 2 seconds to turn on the remote control.

Use the zig-zag Function Button to cycle through 9 different vibration speeds and functions.


Press the round-arrow Rotation Button for at least 2 seconds to activate the rotation function. Press it again more quickly to cycle through 3 rotation speeds. Press it again for at least 2 seconds to turn off the rotation function.

To turn off the remote, press the Power Button for at least 2 seconds. To turn toy off, press Power Button ON THE TOY for at least 3 seconds.

**OPERATION WITH DIRECT TOY CONTROLS:** Use the Power Button to turn the toy on by pressing it for at least 3 seconds.

Press the Power Button again more quickly to cycle through 9 different vibration speeds and functions. The rotation function will activate automatically and switch between 3 rotation speeds as part of the vibration pattern. You cannot operate the vibration and rotation functions separately on the toy directly. Once the toy is on, you may power on the remote and use its buttons to operate vibrations and rotation separately.

To turn toy off, press Power Button for at least 3 seconds.

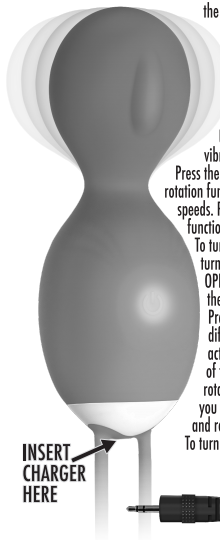

INSERT  
CHARGER  
HERE

USB RECHARGEABLE

