

Product Specifications:

Material: Silicone Battery: Rechargeable lithium battery Voltage: 3.7V x 2 Number of Vibrations: 7 Functions, 5 Speeds for each Function User time: About 35 Minutes Sound Level: About 50 - 58 db

CHARGING INSTRUCTIONS

This vibrator arrives with a minimal partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 45 minutes, and subsequent charges will take about 90 minutes to

complete.
The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 1 hour of play time on the lowest level of vibration, and about 35 minutes on the highest level. eve .

This toy operates at a sound level of 50 - 58db with a rechargeable lithium battery at 3.7V.

Note: For optimal usage, we suggest turning the toy off for 10 minutes after every 30 minutes of continuous use.

INSTRUCTIONS FOR USE

INSERT Charger Here

INSTRUCTIONS FOR USE
This toy has a convenient 2-button control at its base.
To turn toy on, press the Power Button for at least 2
seconds. The light will turn on and toy will begin vibrating
at its first lowest frequency at its lowest intensity.
Once the toy is on, press the Function Button a single time
for each new speed or function for a total of 7.

Once the toy is on and a vibration speed or function is chosen, use the Power Button pressed quickly to cycle through 5 different intensities on each function. To turn toy off, press power button for at least 2 seconds.

USB RECHARGEABLE