



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTION

This vibrator arrives with a minimal partial charge, so it is recommending to fully charge it before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about an hour and a half, and subsequent charges will also take about an hour and a half to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hour of play time on the lowest level of vibration, and about 30 minutes on the highest level.

Toy vibration slows first, then stops completely when charge begins to deplete.


This toy operates at a sound level of 45db with a 3.7V, 140mAh battery

ATTACH USB
CHARGER
TO PRONGS

INSTRUCTIONS FOR USE

This toy has a convenient one-button control at its base.

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

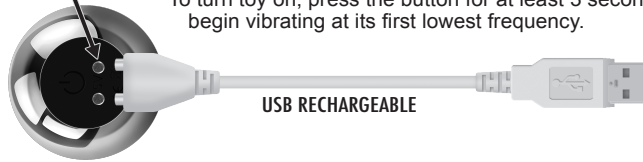

Once the toy is on, press the button a single time for each new speed or function for a total of 9.

To turn toy off, press power button for at least 3 seconds.