

<http://www.genderx.com/>

GENDER 



Product Specifications:

Material: Silicone + ABS
Battery: One polymer battery
Voltage: 3.7V
Number of Vibrations: 10
User time: 50-60 minutes
Sound Level: Under 50 Db



CHARGING INSTRUCTIONS

This toy arrives with a partial charge, so it is recommended to fully charge before use.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger onto the magnetic pins at the base of the toy.

Initial and subsequent charges will take about 80 minutes to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 35 minutes of play time at the highest level of vibration and about 65 minutes at the lowest level.

This toy operates at a sound level of less than 45db with a rechargeable 320mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at its base.

ATTACH USB CHARGER TO PRONGS

To turn toy on, press the Power Button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 9.

To turn toy off, press Power Button for at least 3 seconds.



USB RECHARGEABLE