

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone+ABS
Battery: Rechargeable Li-ion
battery 900mAh
Voltage: 3.7V
Number of Vibrations: 10
User time: 60 mins
Sound Level: <60DB

CHARGING INSTRUCTIONS: This vibrator arrives with partial charge of about 30%. It's recommended to use up this energy completely before charging, and then repeat the full charge/deplete cycle 3 times to maximize battery life. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input, located below the toy's Power Button. Initial charge will take about 4 hours and subsequent charges will take about 3 hours. The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 2 hours of play time on the lowest level of vibration, and about 1 hour on the highest level. This toy operates at a sound level of less than 60db with a 900mAh lithium battery at a voltage of 3.7V. Remote control operates with a Lithium battery 210mAh, already installed.

INSTRUCTIONS FOR USE: This toy can be operated directly with the button at its base, or with the three buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control, but you can put it in standby mode once it's on. Use the button directly on the toy to power it on and off.

OPERATE WITH TOY DIRECTLY

Press the Power Button at toy's base for at least 3 seconds to turn toy on. The light will turn on and motors will begin at their lowest frequencies. Press the Power Button again more quickly to cycle through 10 different thumping/thrusting and vibration speeds and functions in both motors together. Once the toy is on, you may power on the remote and use its buttons to operate vibrations and functions separately.

To turn toy off, press Power Button for at least 3 seconds.

OPERATE WITH REMOTE CONTROL

Once the toy is on (by using the button at its base), press the Power Button on remote for at least 3 seconds to turn on the remote control.

Use the Up and Down buttons to cycle through 10 different thumping/thrusting and vibration speeds and functions in both motors together.

Press the Power Button again for 3 seconds to turn off the remote control, which will put the toy in standby mode. To turn the toy off completely, use the button directly on the toy.

