

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone, ABS plastic
Battery: LiCoMnNiO2
voltage: 3.7-5 V
Number of Vibrations: 3
Modes for Thrusting, 10
modes of Vibration
User time: 90-110MINS
Sound Level: ≤60dB/10cm

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it recommended to charge for at least 30 minutes before using, but not necessary to fully charge before use. Connect the USB plug into your computer or other port and the other end of the DC magnetic charger onto the two magnetic charging pins located at the back of the toy's handle. The battery will charge fully from empty in about 200 minutes.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 110 minutes of play time with the lowest level of vibration, and 90 minutes with the highest level of vibration.

To keep the toy functioning properly long-term, fully charge it at least once every 12 months.

This toy operates at a sound level of less than 60db and a voltage of 3.7 - 5V with a lithium battery.

INSTRUCTIONS FOR USE

This toy has a three-button control panel at its base. The power button at the top turns the toy on and off and puts the motors in standby. The rabbit stimulator is operated by the vibration button at the bottom, and the thrusting, wiggling & rotating motor is operated by the middle button with the two wavy lines.

To turn the toy on, press the Power Button for at least 2 seconds. The button will light up, and both motors will go into standby mode.

Once the toy is powered up, press the bottom vibration button for at least 2 seconds to engage the motor in the rabbit stimulator. Press the button again more quickly to cycle through 10 speeds and functions of vibration as well as the off position.

Once the toy is powered up, press the middle thrusting/wiggling/rotation button for at least 2 seconds to engage the motor in the main shaft. Press the button again more quickly to cycle through 3 speeds of thrusting as well as the off position.

To turn the toy off, press the top power button for at least 2 seconds. The LED light will go dark, and all vibrations and thrusting will stop.



USB RECHARGEABLE



ATTACH USB
CHARGER
TO PRONGS